

## MACRON DYNAMICS, INC.



#### **SPECIFICATIONS**

Load Rating	0-288lbs
Ultimate Tensile Strength	1150lbs
Temperature Range	-20 C to +70 C (-4 F to +158 F)
Shipping Weight	0.75 lbs + 0.03lb/ft of belt
Belt Pitch	5mm

# Drive Belt Kit DBK-BD-

Insert length per meter. Ex. 5 meters = DBK-BD-05

#### **MATERIALS**


Belt	Steel Reinforced Polyurethane
Belt Wedge and Tension Block	Zinc Aluminum Alloy
Screws	Steel
Lock Nut	Steel

#### **PARTS BREAKDOWN**

Description	Qty/Kit
Drive Belt	1
Tension Block	2
Belt Wedge	2
M4 Socket Head Cap Screw	4

BELT LENGTH = (BEAM LENGTH x 2) + .15m

#### **DIMENSIONS**

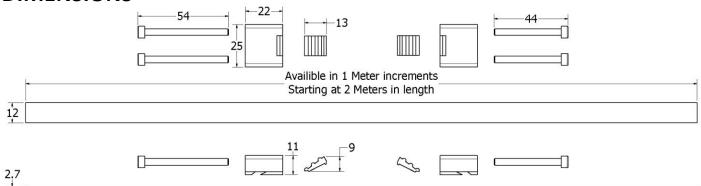

MACRON DYNAMICS, INC. 100 Phyllis Drive

Croydon, PA 19021

P: 215-443-8888 F: 215-443-0981 macron@macrondynamics.com



### **MACRON DYNAMICS, INC.**

# Belt Installation Instructions

### PRODUCT Datasheet



The tools you will need include a torque wrench (lb. in.), tensioning tool, tin snips, M3 allen wrench, and a flathead screwdriver.



Insert the belt into the slot closest to the bottom.



Push the belt in till it comes out the top. A screwdriver might be helpful to help along the pulley



Using a *sharp* pair of tin snips, cut belt to length. Last tooth needs to be cut in half.



It needs to be cut down the middle so that it has enough to catch the wedge.



Slide the belt through both of the tension blocks so that the "M" is facing up.



Place both wedges at the end of the belt so that the half-tooth is flush with the end of the wedge.

MACRON DYNAMICS, INC. 100 Phyllis Drive Croydon, PA 19021



Pull the belt to tighten the wedge and the belt within the tension block.



Attach the tension block to the cart using the shorter set of bolts on the drive side. The longer bolts will be used for the variable side.

P: 215-443-8888 F: 215-443-0981 macron@macrondynamics.com R e v 0 1



# MACRON DYNAMICS, INC.

PRODUCT Datasheet



Move the cart to the end of the actuator. Then place the tensioning tool at the middle of the belt.



Set the wrench to the correct torque setting, adjust belt to achieve level position at the recommended torque.